



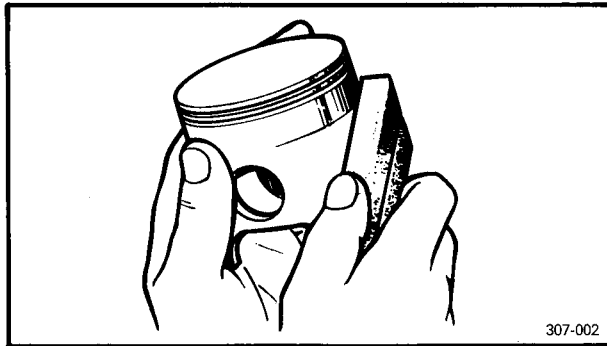


- Place a 400 ~ 600 grit wet sandpaper on the surface plate, and resurface the head using a figure-eight sanding pattern.

NOTE: _____

Rotate the head several times to avoid removing too much material from one side.

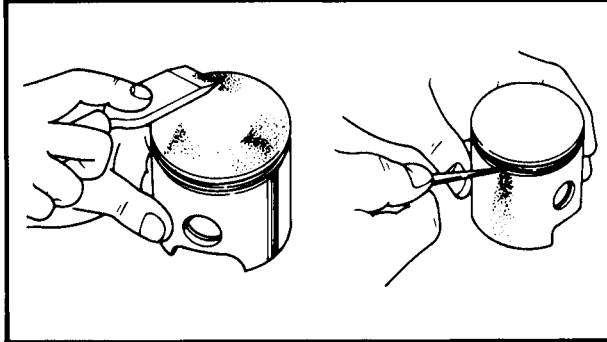

307-002

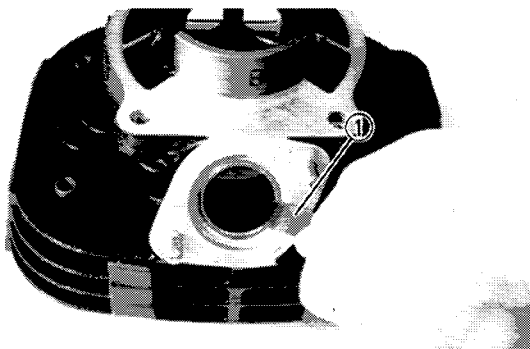

CYLINDER AND PISTON

1. Eliminate:
 - Carbon deposits
From the piston crown and ring grooves.
2. Eliminate:
 - Score marks and lacquer deposits
From the sides of piston.
Use a 600 ~ 800 grit wet sandpaper.

NOTE: _____

Sand in a crisscross pattern. Do not sand excessively.

3. Inspect:
 - Piston wall
Wear/Scratches/Damage → Replace.

4. Eliminate:
 - Carbon deposits
Use a rounded scraper ①.

5. Inspect:
 - Cylinder wall
Wear/Scratches → Rebore or replace.

4